



Instruction Manual



UE 4Site Instruction Manual

Table of Contents

Overview	1
Hardware Installation	2
Quick (Basic) Installation	5
Standard Setup	7
Setup Menu	9
Set Date/Time	10
DMS Menu	11
DMS IP Address	12
DMS IP Port	13
Network Menu	14
DHCP Enabled/Disabled	15
IP Address	16
Subnet Mask	17
Gateway	18
DNS1 Address (Primary)	19
DNS2 Address (Secondary)	20
DMS Connected	21
System Shutdown	22
Display 2	24
Shutdown Option #2	25
SD Card Location	25
Appendix A: UE 4Site Diagrams	26
Appendix B: UE Power Supply Diagram	29
Appendix C: RAS-A Diagram	32

UE 4Site Overview:

I. Introduction/Overview:

UE 4Site System incorporates sensors and a computer for continuous monitoring of electrical and air applications via either an Ethernet or WIFI connection.

Users have ability to control and set parameters such as alarms and sound recordings for individual RAS (Remote Access Sensors - Air). RAS-A sensors are permanently mounted transducers that are connected to the UE 4Site communications controller. Data stored locally on the UE 4Site can be sent and stored directly to UE Systems Ultratrend DMS 6 software for further analysis.

II. Systems Requirements:

- Ethernet or WIFI connection
- Ultratrend DMS 6
- PC computer w/Ethernet or WIFI capabilities

A. Components:

BNC inputs



Ethernet connection

Power in




RAS-A Sensor



Optional Power Supply

Main Box Features:

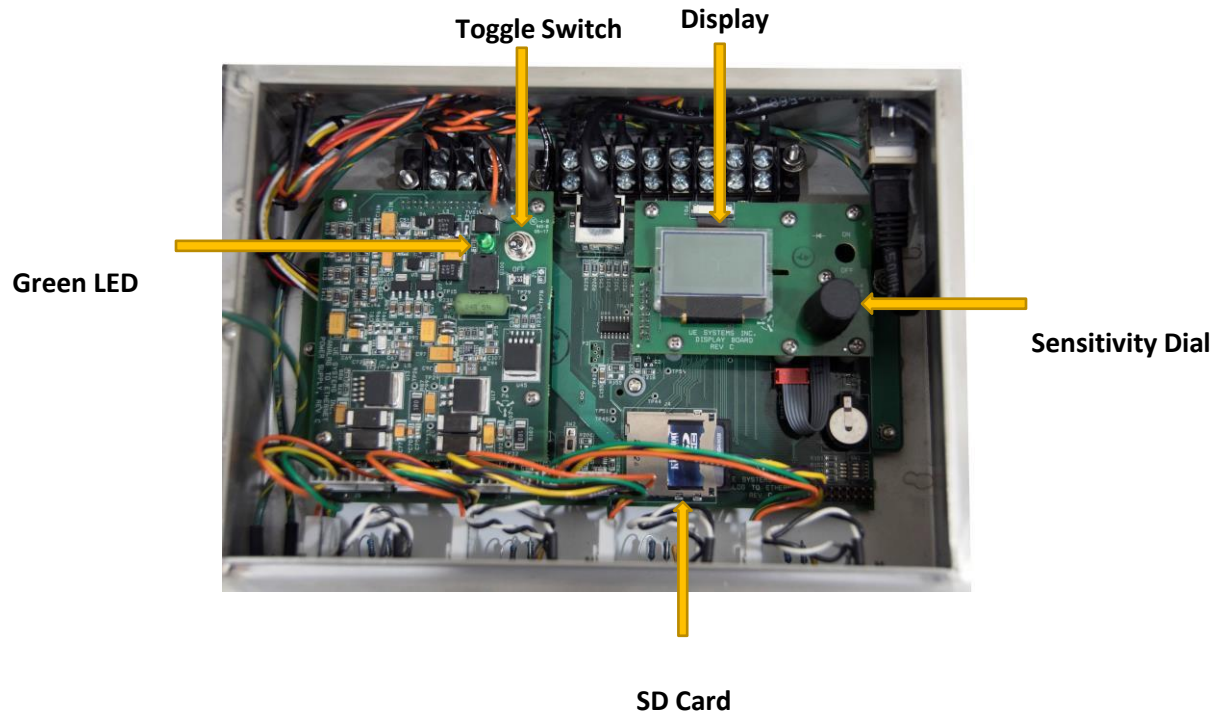

III. Installation:

A. Mount and Connect 4Site, RAS-A


1.) **Mounting the 4Site:** Mount the 4Site to a location that will provide easy access. For drill hole dimensions refer to Appendix diagram: A-1

a. Setting up

1. Connect to Power supply: Power: 24 VDC 1 Amp Conditioned.
 - a. UE Systems offers an optional power supply.
2. Connect Ethernet cable to UE 4Site



3. Testing power: Green light will illuminate when toggle switch is in the on position.

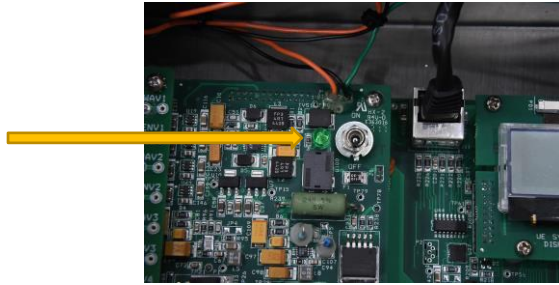

1. Connect BNC cable to RAS-A sensors and then connect to 4Site box. Standard cable length is 25' (7.62 m). Other cable lengths are available.




2. Be sure to check the connection between 4Site and RAS-A



NOTE: Before testing RAS-A connection and dB values, the asset ***must be running***.

- a. When power is on and the asset is operating, the display screen will show test point # and either an arrow or dB value. If the arrow is displayed, turn the sensitivity dial in the direction of the arrow until a dB value is displayed.
- b. Repeat for each of the installed RAS-A sensors. To do so, Push/Click the Sensitivity dial to see the Sensor number (1,2,3,4).

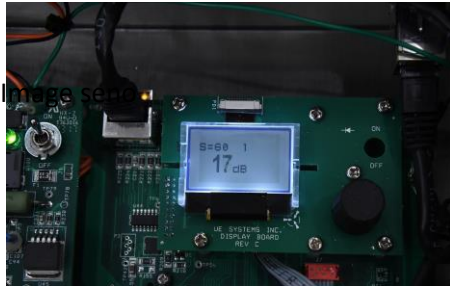

3. Establish connection between 4Site and computer (Refer to our **Ultratrend DMS 6 User Manual**).

UE 4Site is designed to be a plug-n-play device. Once DMS database is configured, all that the 4Site needs is an IP address of where the 4Cast Controller service is located on the network.

III A: Quick (Basic) Installation:

One of the simplest configurations to have with the UE 4Site is to first have all 3 programs (DMS Interface, DMS Database and “4Cast Controller Service”) installed on one computer, with a Static IP address. Once the programs are installed and configured and the 4Site is connected to power, Ethernet & RAS sensors and power is on, then proceed to configure the 4Site to the computer.

Note: This is one of the simplest configurations and one of many to have. For more complex configurations, please consult your IT department.

1.) **Enter Setup Menu:** Turn the sensitivity knob till setup menu is highlighted, then push and hold till sub-menus are displayed.




2.) **DMS Menu:** Turn knob till DMS Menu is highlighted, then push/click the knob to enter.




3.) **DMS IP Address:** Highlight and push/click knob to enter.



4.) **Modify Address:** Spin the dial to the desired number, push/click the dial select and then spin again to modify. Once modified, push and spin again to exit and push again to exit out of screen. Again, the IP Address on the 4Site needs to match the IP Address of the of the UE 4Cast Controller computer so that both "UE 4Cast Controller Service" & 4Site can communicate.

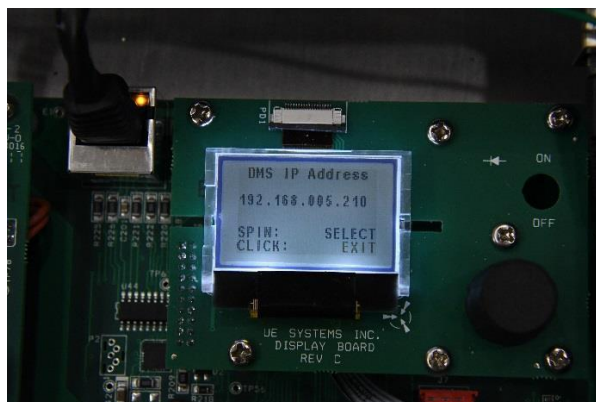


5.) **DMS Connected:** Once you have exited out of the setup menu, after a moment the “DMS Connected” will be displayed on the top of the main display. Once connected, you may now be able to go onto the DMS 6 program and configure the “box” to any specific machine/points within an existing route.

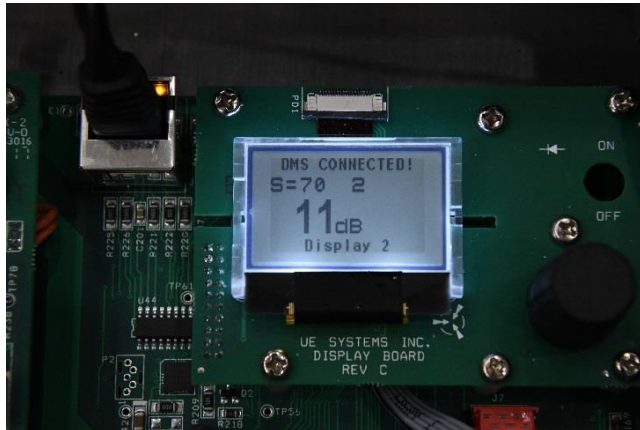


III B: Standard Setup:

NOTE: CONFIGURE DMS/UE SERVER AND DATABASE PRIOR TO CONFIGURING UE 4Site. (Refer Ultratrend 6 User Manual)

1. Once RAS sensors, power and Ethernet are connected to 4Site and have been tested, open box and flip the toggle switch to the “ON” position. Green LED light should be lit once 4Site is turned on.

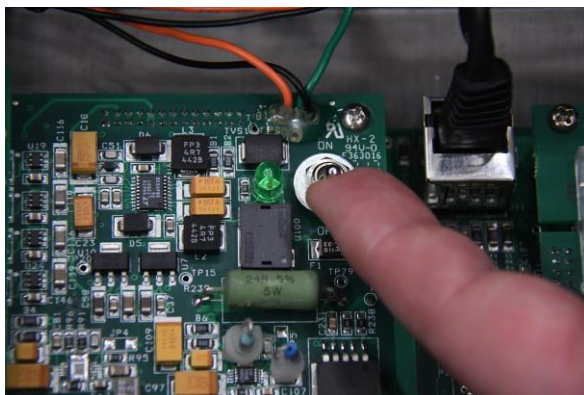

2. **Splash Screen:** Once the unit is turned on, the box will then start the boot-up sequence and “4SITE” should be present on the splash screen display. The splash screen should show the UUID and the firmware information of the device.

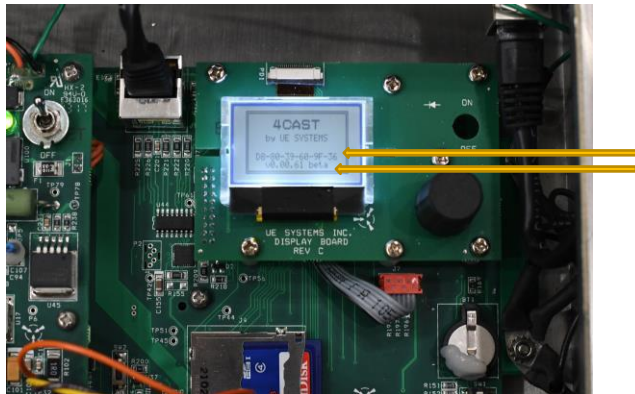


3. Once the boot sequence is finished, it will show the “main” display: The sensitivity value “S=”, Point # and dB of the sensor. If 4Site is not reading correctly, the display will show an arrow pointing to the left, meaning over-range or an arrow pointing to the right meaning under-range.



4. **Setup Menu**: Push (click) the sensitivity knob until the bottom of screen is flashing and spin the sensitivity knob until “Setup Menu” is present. Push and hold the sensitivity knob in place until you are in the setup menu options.




5.) Sensitivity Knob Location:

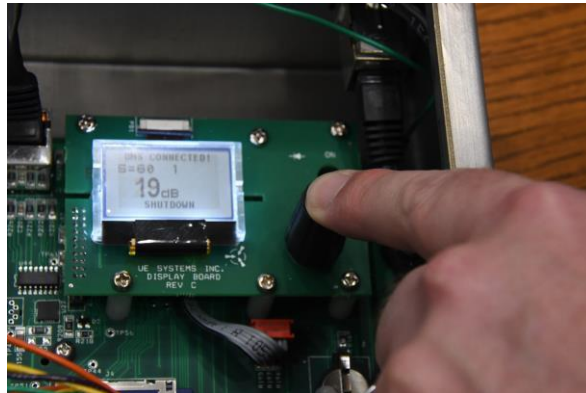

6. Menu #1- Set Date/Time: Click (push) the sensitivity knob to modify the date/time.



Z. To modify any values, just spin to the correct value (time or date) and click (push) the knob to set. Then spin again for the next value and click to set. Once finished, just spin dial highlight “EXIT”, hold down the sensitivity knob to exit out of menu #1 to go back to the main menu.

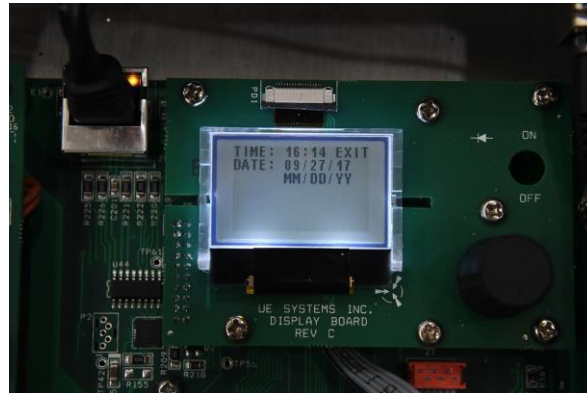

8. Menu #2- DMS Menu: The section holds the IP Address and IP Port information. Highlight DMS Menu and hold down the dial to enter.

Note: If possible, for the installation and programming of 4Site, consult with your IT department and Electricians.



9. DMS IP Address: An IP address, or simply an "IP", is a unique address that identifies a device on the Internet or a local network. It allows a system to be recognized by other systems connected via the Internet Protocol (IP). To locate the IP address of the computer that contains the database and the UE 4Cast Controller program, open the Windows search box located on the task bar for Windows 10. Then type **CMD** and select "enter". The **CMD** icon will be displayed, click on it and the window will open. In that window type **ipconfig** and select "enter". It will display the IP, Subnet and Gateway addresses of the computer that has the UE 4Cast Controller program installed. This is because the UE 4Site only communicates with the UE 4Cast Controller program. There are different configuration setups for this program, therefore it is important to think this through before implementing. If possible, consult with your IT department.

In the 4Site, push the sensitivity dial to enter DMS IP Address options.



10. DMS IP Address continued: Spin the dial to the desired number, push the dial to select and spin again to modify. Once modified, push dial and spin again to exit and push again to exit out of screen. The IP address on the 4Site needs to match to the IP address of the Server/computer so that both “UE 4Cast Controller service” & UE 4Site can communicate. (See DMS 6 user manual)




11. DMS IP Port: A port number is a way to identify a specific process to which an Internet or other network message is to be forwarded when it arrives at a server/computer. Highlight IP Port and hold down the dial to enter.



12. DMS IP Port: Is the port number that the UE 4Cast Controller Service is configured to and connects with on the database computer. Spin the dial to the correct # you want to change and then push the dial. Next, spin to the desired value. When finished, highlight EXIT and hold down the dial to exit out of the menu.

Note: The default for the IP Port is 7001. This number will probably not be changed because its rarely ever used. Your IT people will verify if this Port number is available. If you don't have IT, just leave it as 7001.

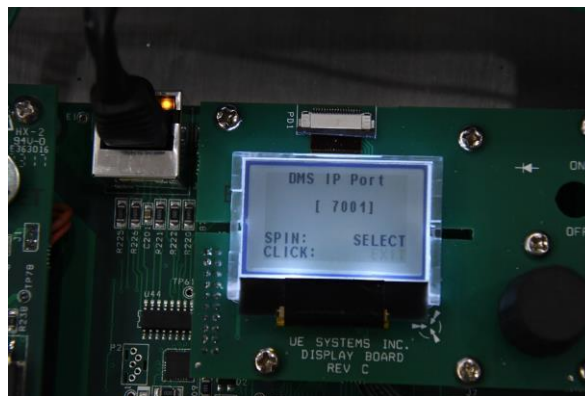


13. Network Menu: Inside this menu is where to configure the network of 4Site. Push/click the knob to enter.


Note: If possible, for the installation and programming of 4Site, consult with your IT department and Electricians.



14. Network Info: Shows everything within the 4Site: MAC Address, IP Address, Subnet Mask, Gateway,DNS 1 & 2, Etc.

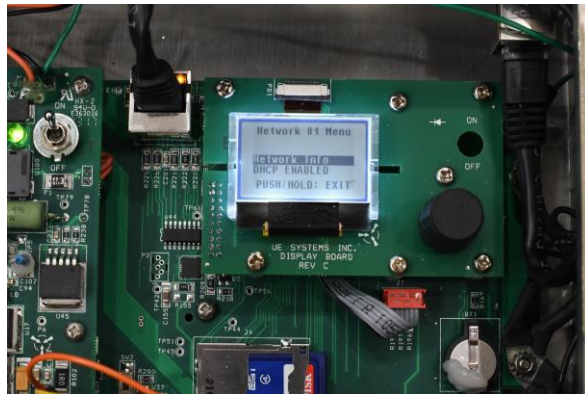


14A. Network Info. Continued: The display will show all the addresses that have been configured for UE 4Site.

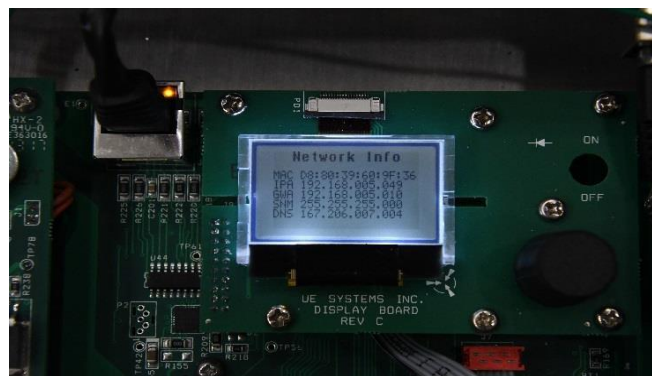

15.DHCP Enabled/Disabled: Dynamic Host Configuration Protocol (DHCP) is a client/server protocol that automatically provides an Internet Protocol (IP) host with its IP address and other related configuration information such as the subnet mask and default gateway. As an example, think of when you connect to WIFI with your phone as a guest at a facility. The facilities router will give an IP Address for your phone to use to get online.




16. DHCP Continued- Turn the dial to either “Enabled” or “Disabled” then push the dial to exit that menu. The DHCP will be enabled for most configurations. Usually, the only time to disable the DHCP is when you have no access to any network and must connect the 4Site directly to a computer that has the UE 4Cast Controller Service, DMS database and DMS Interface. In this configuration, the computer must have a static IP address to enable 4Site to communicate. This means the IP address will not change.

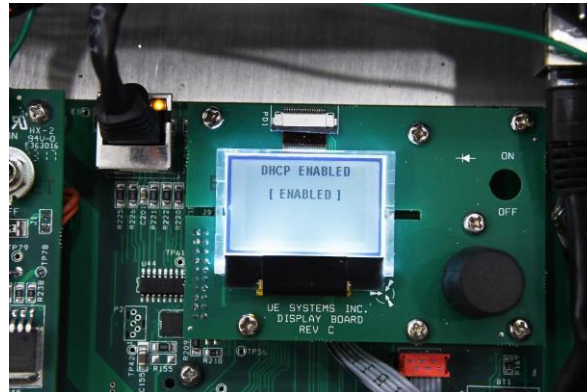

17. IP Address: When the DHCP is disabled because there's no access to a network and there is a need to directly connect a computer through a switch that has a static IP address and possibly have more than one 4Site. An IP address must be assigned for both, the computer and 4Site.

Example: A computer is connected to (3) UE 4Sites via a switch and is also connected with a computer that has the UE 4Cast Controller Service, DMS database and DMS Interface installed. The IP address for that computer is 192.168.12.224. To enable the (3) 4Site to communicate with that computer, each 4Site must match the first 3 sets of numbers from the static IP address that is configured on the computer. 1st 4Site can be 192.168.12.34, 2nd 4Site can be 192.168.12.111 and 3rd 4Site could be 192.168.12.175. All 3 would be able to communicate with the computer.

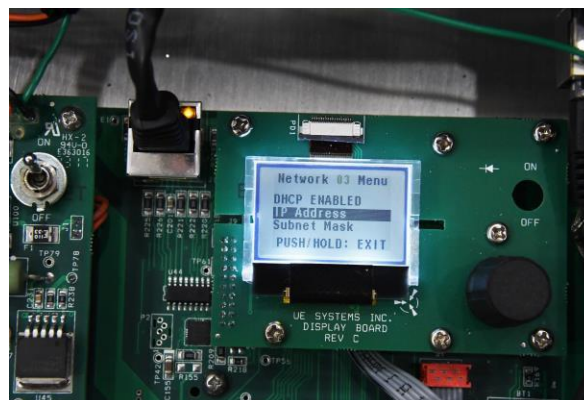

18. IP Address Cont.: Spin dial to desired number, push dial to activate and spin again to modify. Once modified, push dial and spin to exit and push to exit out of screen.



19. Subnet Mask: Makes decisions if the data is local or not. If the Subnet Mask determines that a set of data isn't local it sends that data to the "Gateway" to handle where it should be sent. Typically, the local address would be 255.255.255.0. Typing **ipconfig** in your CMD prompt will give you the Subnet mask of the computer that will be running the UE Server.



20.Subnet Mask Cont.: Spin dial to desired number, push dial to activate and spin again to modify. Once modified, push dial and spin again to “exit” and push to exit out of screen.




21.Gateway: When data are sent over a network, the destination IP address is examined. If the destination IP is outside of the network, then the data goes to the gateway for transmission outside of the network.



22. Gateway Cont.: Spin dial to desired number, push dial to activate and spin again to modify. Once modified, push dial and spin again to “exit” and push to exit out of screen. Typing ipconfig within the CMD prompt on the computer that will run the UE 4Cast Controller Service will give you the correct “Gateway” address.




23. DNS1 Address (Primary): DNS (Domain Name System), the Internet's system for converting alphabetic names into numeric IP addresses. For example, when a Web address (Google) is typed into a browser, DNS servers return the IP address of the Web server associated with that name.

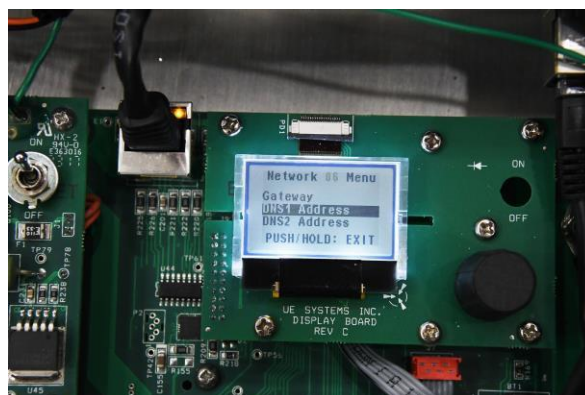


24. DNS1 Address Cont.: Spin dial to desired number, push dial to activate and spin again to modify. Once modified, push dial and spin again to exit and push to exit out of screen.

Note: Both DNS1 & DNS2 are currently disabled and the address' for both can be left alone at 0.0.0.0.

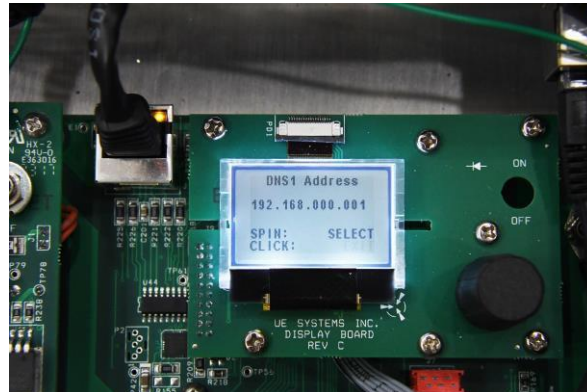


25. DNS2 Address (Secondary): In general, domain names can work with only one name server - the primary DNS. However, practice has shown that a domain name needs to have at least two-name servers assigned to be available at any time. In case there is a problem with the primary name server, the secondary name server will be able to answer the online request for a particular domain. This back-up requirement has turned into an accepted Internet standard that prevents domain names from going offline.

Note: Both DNS1 & DNS2 are currently disabled and the address' for both can be left alone at 0.0.0.0.

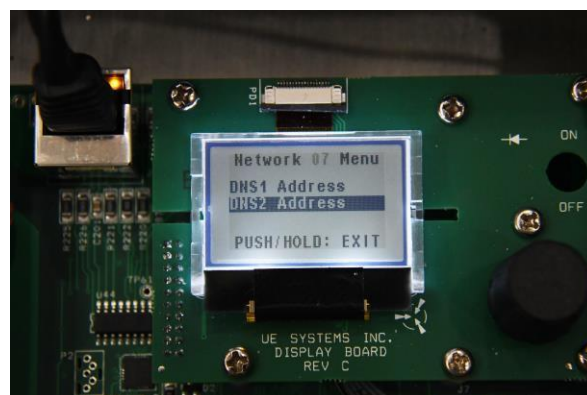

26. DNS2 Address Cont.: Spin dial to desired number, push dial to activate and spin again to modify. Once modified, push dial and spin again to “exit” and push to exit out of screen.

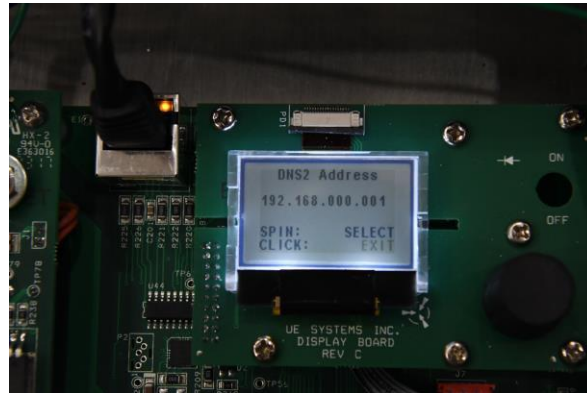


27. DMS Connected: Once configuration for the network is complete and correct (for both the UE 4Cast Controller and UE 4Site), the top of display will state that DMS is now connected to the 4Site box.



28. System Shutdown: Push the Sensitivity knob to activate the menu.



29. System Shutdown Continued. To keep the system on-line, Click/push to enter, select “No” and push the dial to exit shutdown mode.

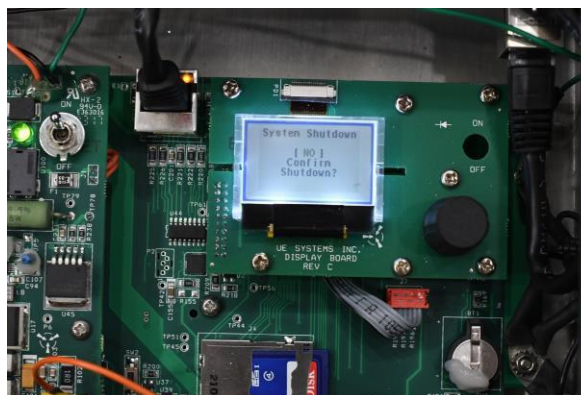

30. System Shutdown Continued: To turn the 4Site system off, select “Yes” and push the dial to confirm shutdown.




31. System Shutdown Cont.: After confirming shutdown, flip toggle switch to the off position to turn off 4Site.



32. Display 2: Make sure that “Display 2” is being displayed and push and hold the sensitivity knob.




33. Display 2 Continued: Once Display 2 is enabled, the screen will display all 4 sensors with current “live” decibels and sensitivity levels.

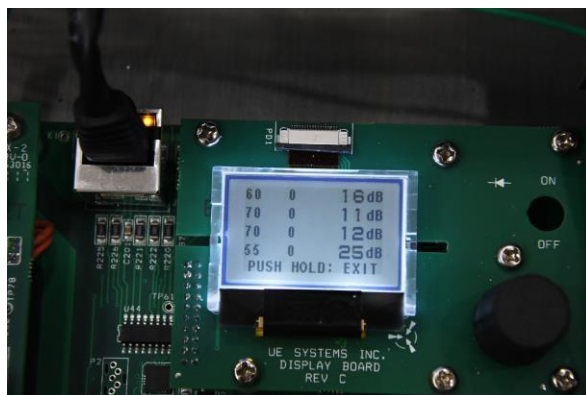

Shutdown Option #2: Another way to “shutdown” the unit is in the main display itself. Simply push and hold the sensitivity knob to select the shutdown option. Once display states that it’s safe to turn off, you may then flip the toggle switch to the off position to cut power to the unit.






SD Card Location: Standard size that comes with each UE 4Site is 16GB. Maximum size to use is 32GB.

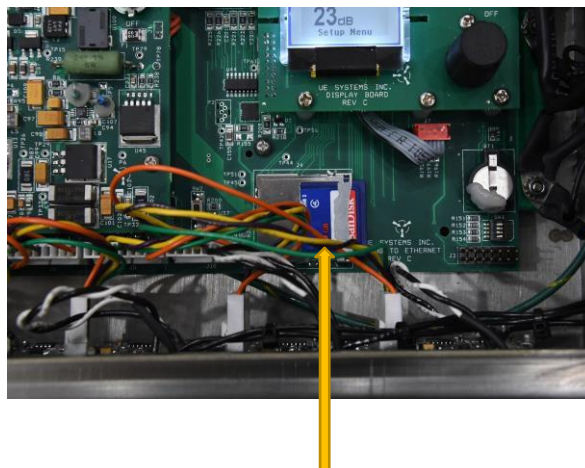


Appendix A:

A. UE 4Site Diagrams:


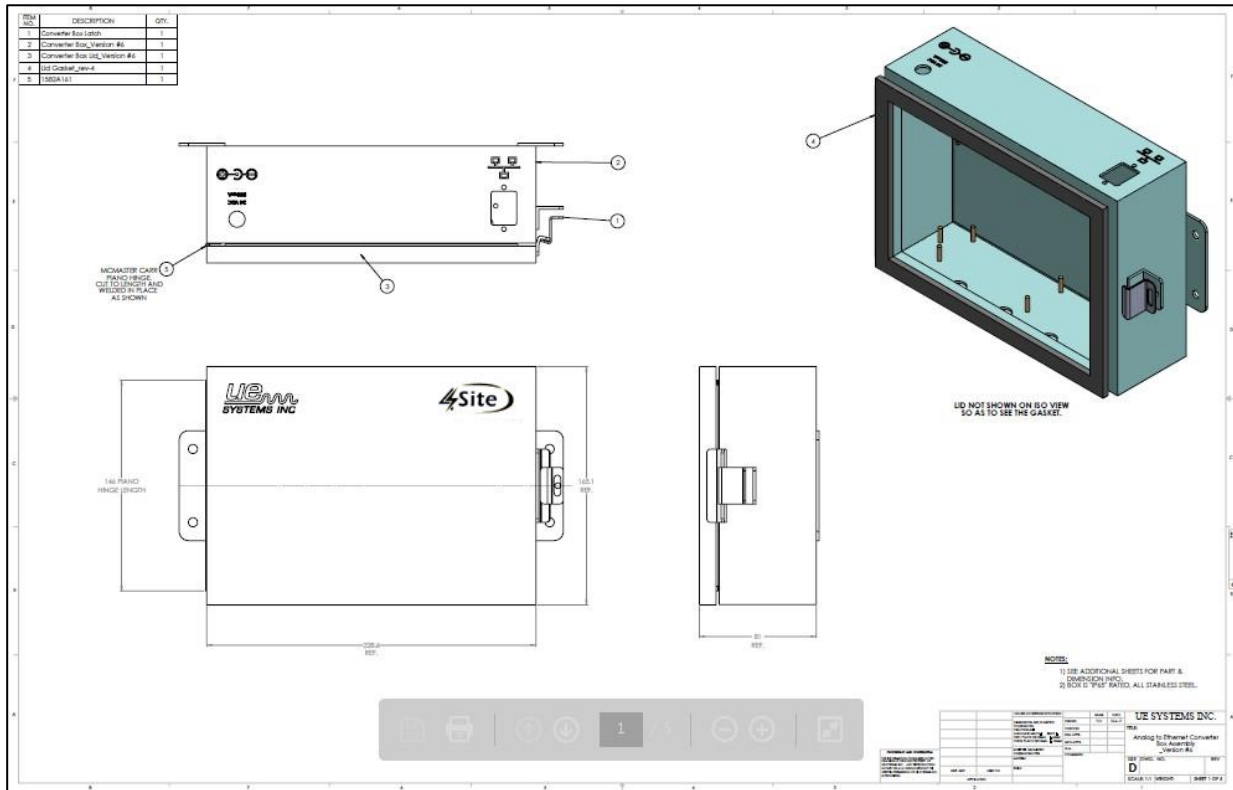


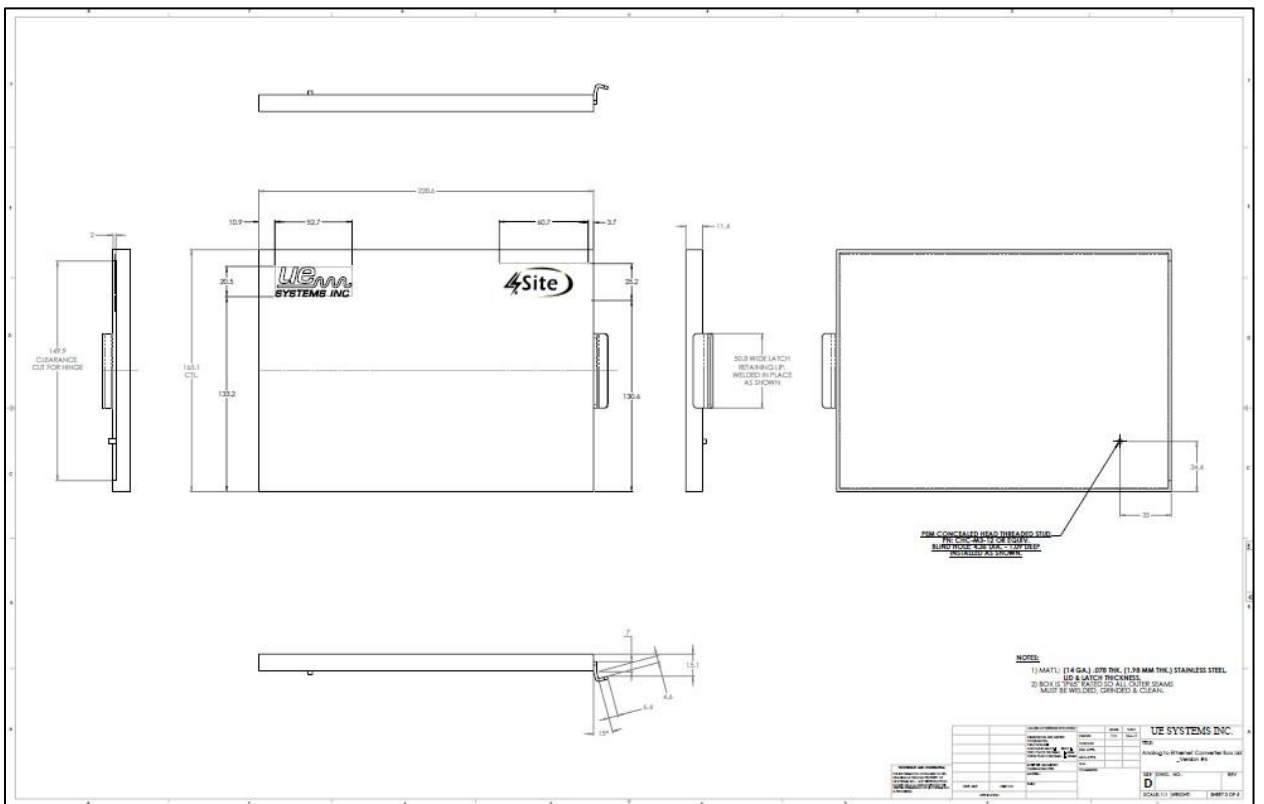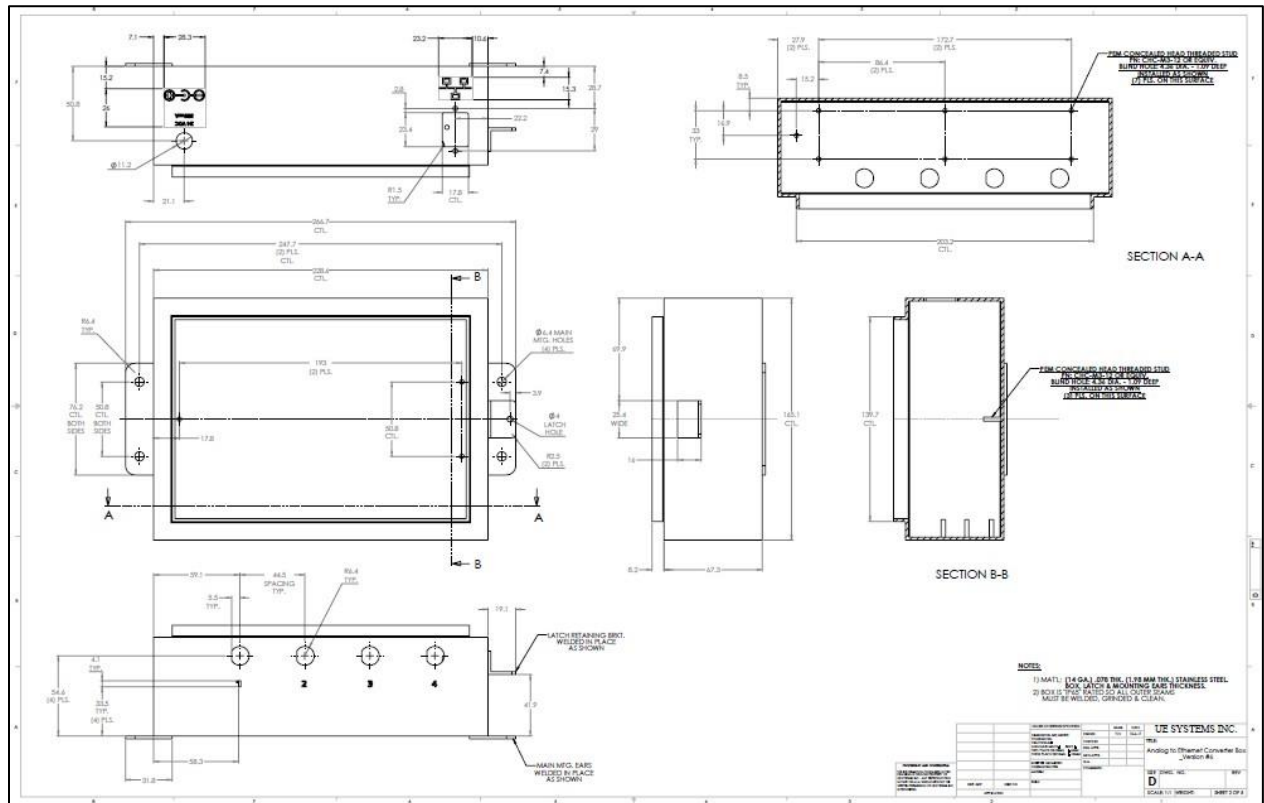


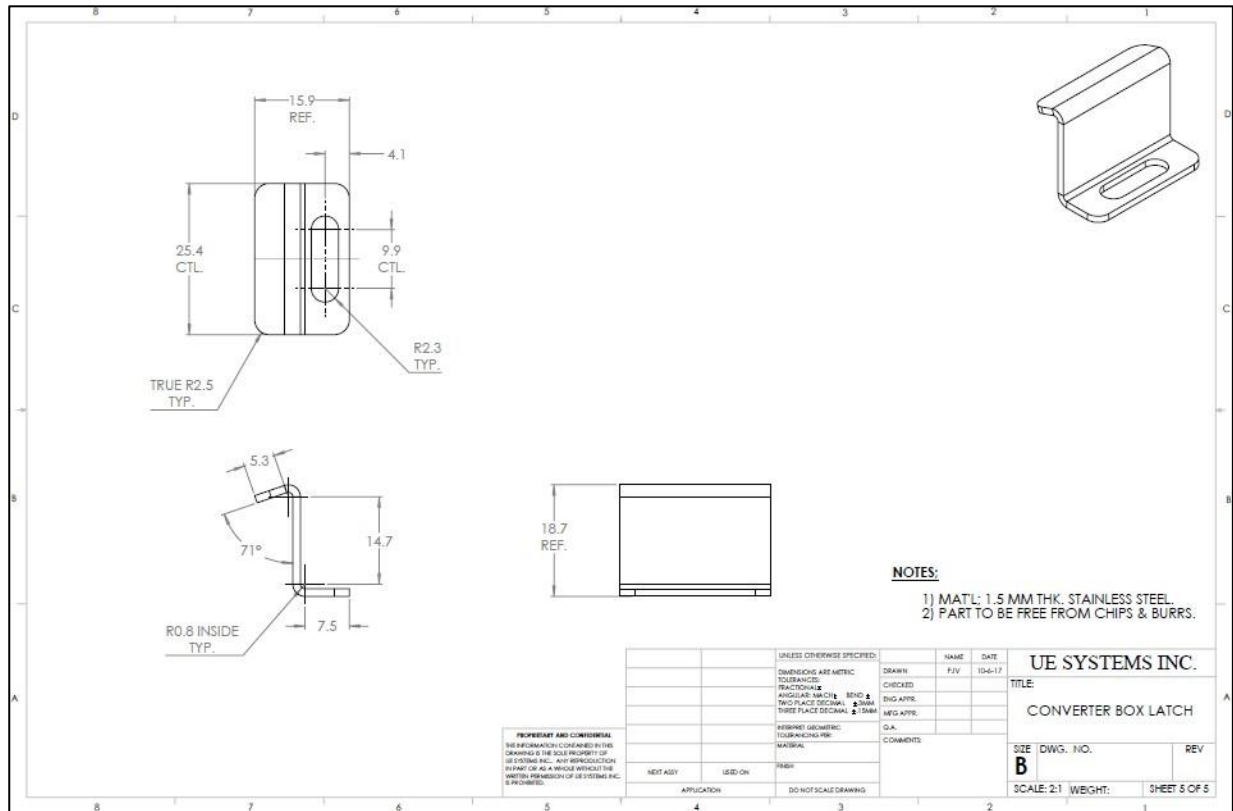

B: UE Power Supply Diagram:




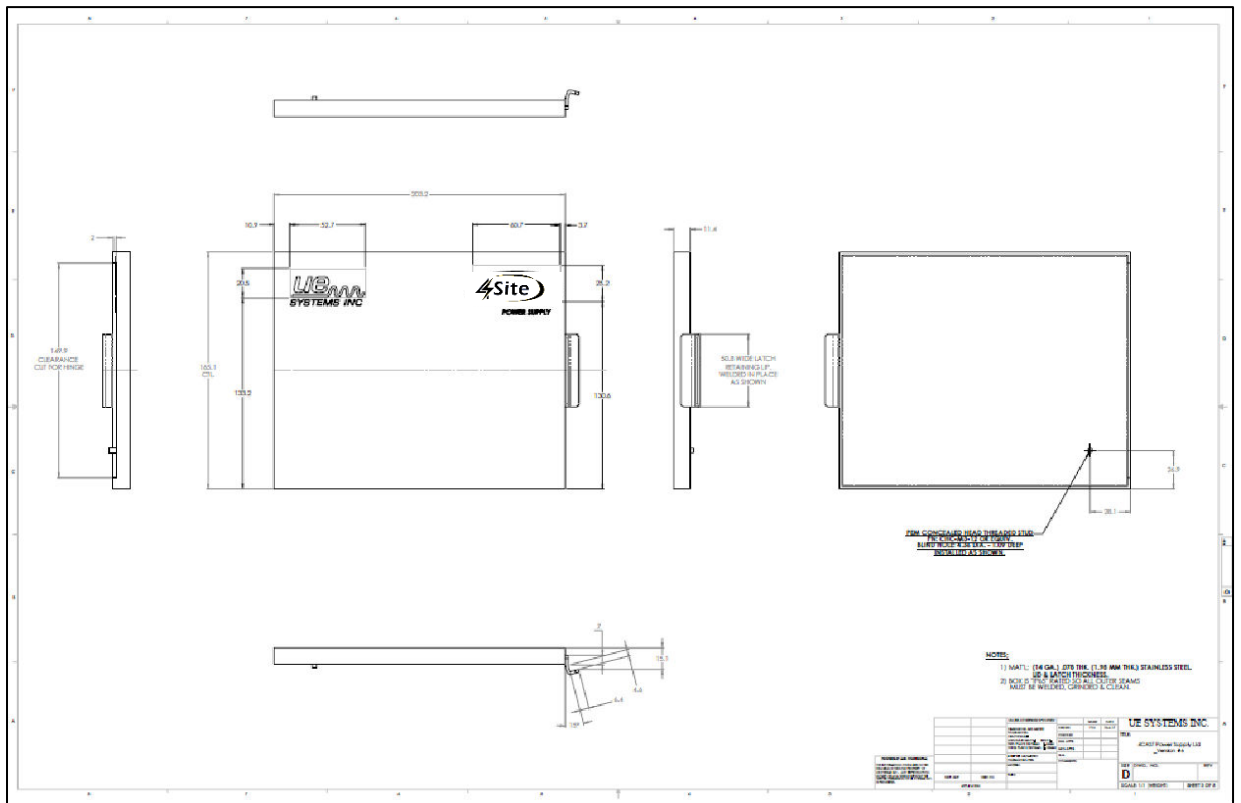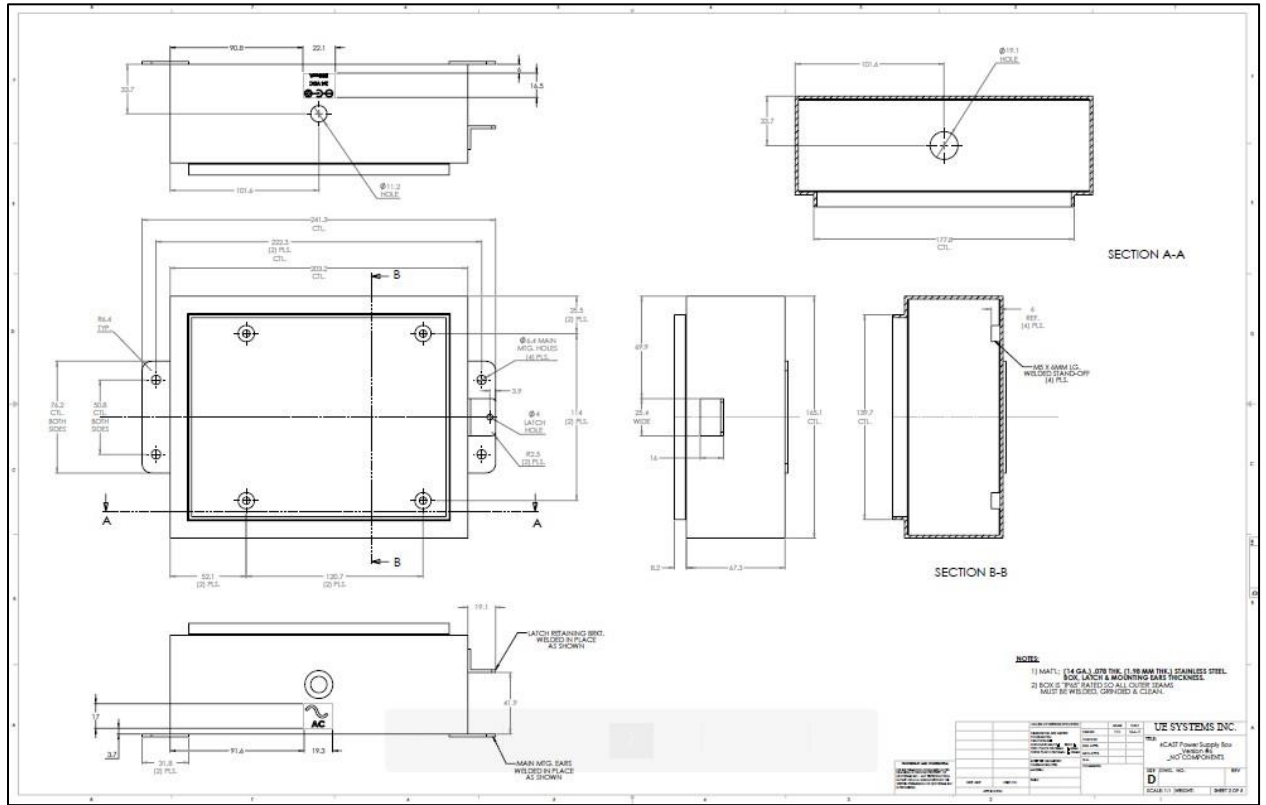

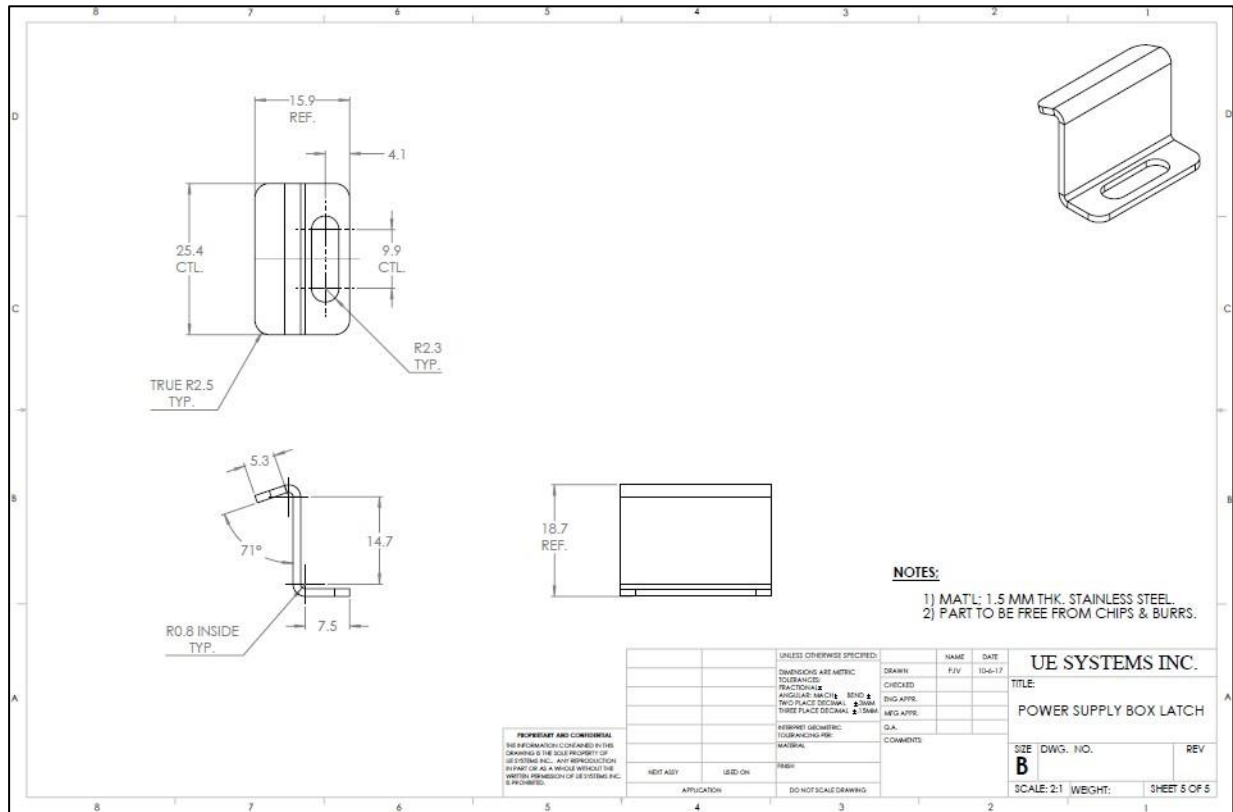

Appendix C:

RAS-A Diagram:

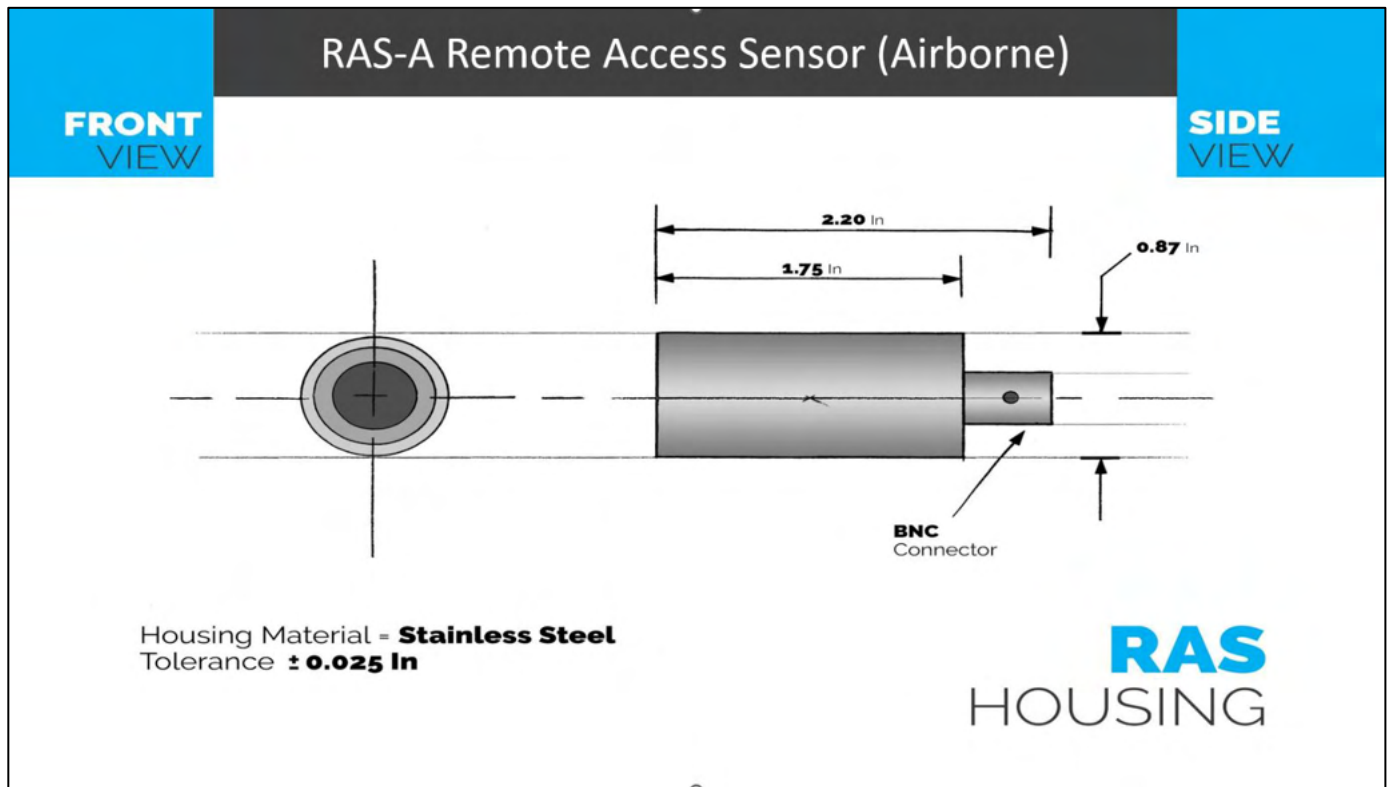



Contact Information:

**UE Systems, Inc
14 Hayes Street
Elmsford, NY 10523 USA**

**PH: 1-800-223-1325
PH: + 1-914-592-1220**

**E: info@uesystems.com
www.uesystems.com**

